



15 East Avenue Athens, TN
(800) 521-2855

bullbbq.com

Keerator

Owner's Manual

SKU# 17900



**USA
EDITION**



Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Plug into a grounded outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
3. Replace all panels before operating.
4. It is recommended that a separate circuit serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
5. Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
6. Do not connect or disconnect the electric plug when your hands are wet.
7. Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
8. Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other services should be referred to a qualified technician.
9. Use two or more people to move and install this appliance. Failure to do so can result in back or other injury.
10. To ensure proper ventilation of this appliance, the front of the unit must be completely unobstructed.
11. Choose a well-ventilated area with temperatures above 50°F (10°C) and below 109.4°F (43°C).
12. The appliance should not be located next to ovens, grills or other sources of high heat.
13. It is important that the appliance be leveled in order to work properly. You may need to make several adjustments to level it.
14. All installations must be in accordance with local plumbing code requirements. Make certain that the pipes are not pinched, kinked, or damaged during installation. Check for leaks after connection.
15. Never allow children to operate, play with or crawl inside the appliance.
16. Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
17. Use this appliance only for its intended purpose as described in this Instruction Manual.
18. Keep fingers out of the "pinch point" areas. Clearances between the door and cabinet are small by necessity.
19. Be careful closing door when children are in the area.
20. Save these instructions.

 **WARNING:** This product may expose you to chemicals including lead which is known to the State of California to cause birth defects or other reproductive harm.
For more information, visit: www.P65Warnings.ca.gov

 **WARNING:** Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will "just sit for a few days". Before discarding your old refrigerator, take off the doors and leave shelves in place so that children may not easily climb inside.

IMPORTANT: This appliance utilizes an external electrical source; therefore, this appliance, when installed, must be electrically grounded in accordance with local codes. In the absence of local codes, this appliance must be electrically grounded in accordance with one of the following:

- NFPA 70
- Canadian Electrical Code, Part 1

We care about your safety, so please...

Read and follow all warnings and instructions before assembling and using your refrigerator.

Retain this manual for future reference.



Table of Contents

<i>Installation Instructions</i>	4
<i>Door Hinge Reversal</i>	5
<i>Tower Installation</i>	10
<i>Keg Connection Details</i>	11
<i>Operating Instructions</i>	13
<i>Cleaning and Maintenance</i>	14
<i>Helpful Tips</i>	16
<i>Troubleshooting</i>	17
<i>Product Warranty and Registration</i>	18
<i>Replacement Parts List</i>	19
<i>Warranty Policy</i>	20

Service Information

Model Number:

17900

Serial Number: _____

Date of Purchase: _____

Place of Purchase: _____

Installation Instructions


Locating your appliance:

- This appliance is designed and intended for built-in recessed or free-standing installation applications only.
- Place your appliance on a floor that is strong enough to support it when fully loaded.
- Ensure that your appliance is level, there are two adjustable legs on the front of the appliance to assist in leveling the appliance.
- Ensure that the air vent located on the front of the appliance is never covered or blocked in anyway.
- It is recommended that you do not install this appliance near an oven, radiator, or other heating source. Doing so will result in increased energy consumption.
- Do not install in a location that falls below 50°F (10°C).
- For best performance, do not install the appliance behind a cabinet door or block the base of the grill.
- Avoid locating the appliance in moist areas.

Before first use:

1. Remove the exterior and interior packing.
2. Allow the appliance to stand upright for a minimum of 24 hours. This will reduce the possibility of a malfunction in the cooling system from shipping/handling.
3. Clean the interior surface with lukewarm water using a soft cloth.
4. Insert shelf supports into the racks at the desired locations as shown in the image below. There are three wire racks that will require six total shelf supports.
5. With supports installed, simply slide in the shelves and allow them to rest on the supports.


IMPORTANT: Ensure the door is fully open when installing the shelves, and take great care not to damage the door gasket with the shelves.

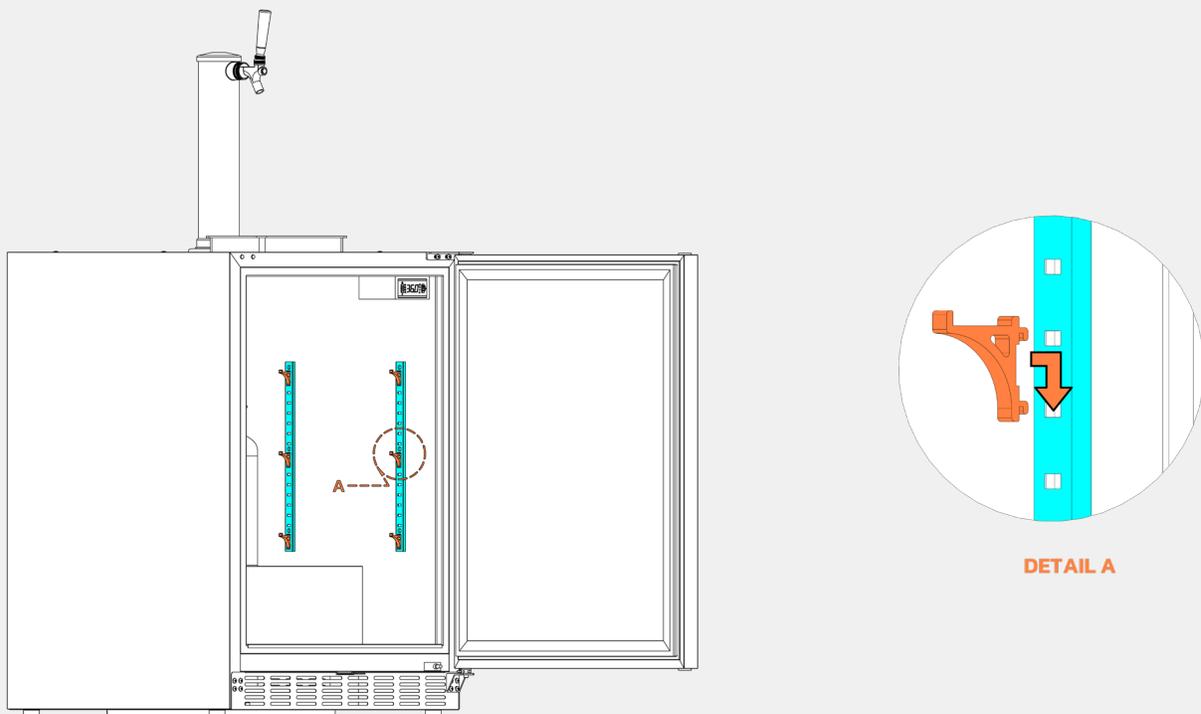


Door Hinge Reversal

Door Hinge Configurations:

- The appliance door can be configured to open on either the left or right side. By default, the appliance is shipped with the hinge on the right.

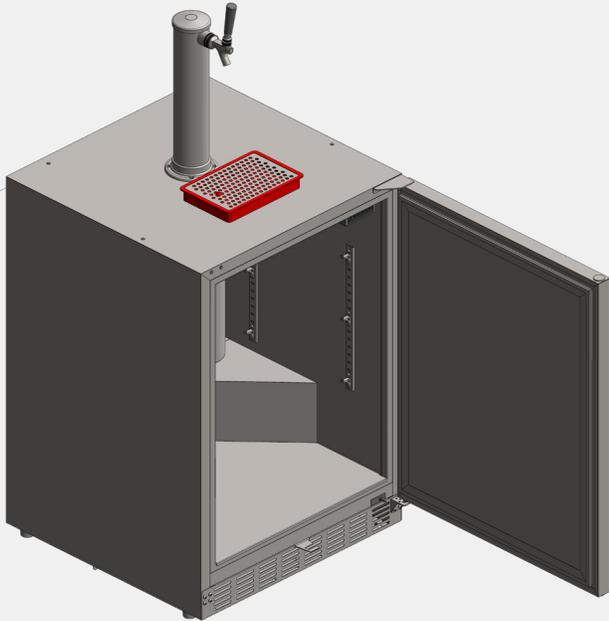

Default Door Configuration (RH Hinge)


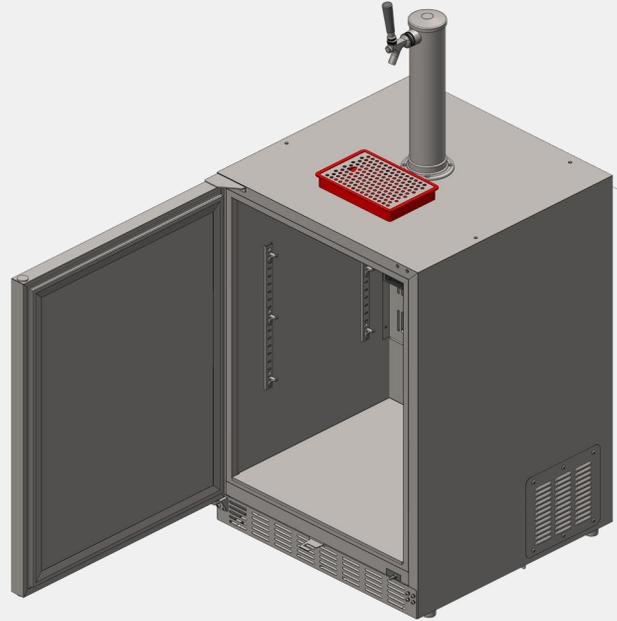


Optional Door Configuration (LH Hinge)

Door Hinge Conversion:


Before continuing, unplug the unit from its electrical source! Then, to swap the hinge arrangement, follow the following process.

1. With the door open, remove all the shelves from inside the appliance.
2. Close the door and carefully lay the appliance on its back as shown below.
3. Locate the two hex keys provided with your appliance and insert the smaller hex key into the hole shown below (highlighted orange below).
4. Push on the key to rotate the pin counterclockwise. This will relieve the tension put on retaining pin (highlighted green below) and it should slide out freely. If needed, use the other hex key to push the pin out.

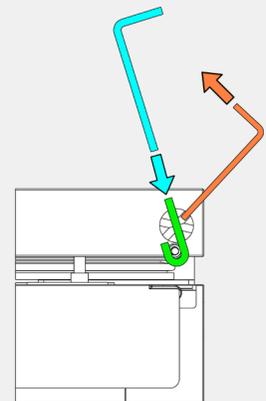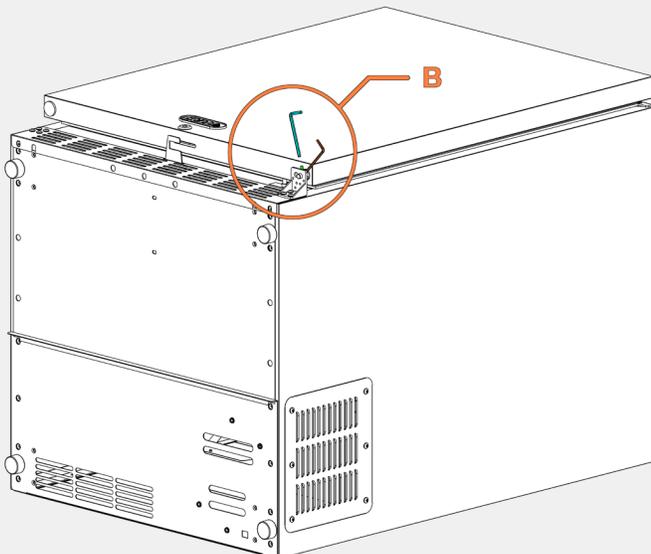


DETAIL B

5. When the pin has been disconnected from the screw holding it in place, carefully release the force on the smaller hex key and allow the hinge pin to release any remaining tension.
6. Remove the lower hinge bracket secured to the appliance via four Phillips head screws. Retain this bracket for later.


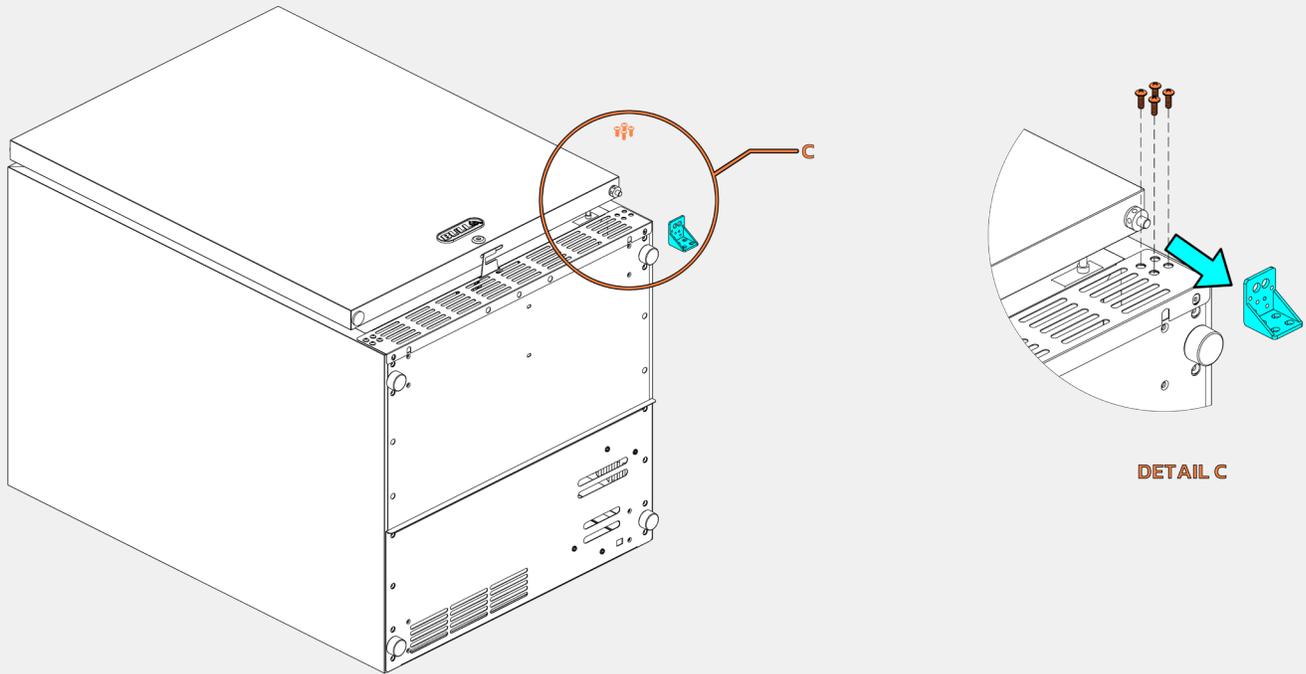


7. Open and slide the door off the upper hinge bracket. Set the door aside.
8. Remove the upper hinge bracket secured to the appliance via two Phillips head screws. Save these screws as they will be reused in the next steps.

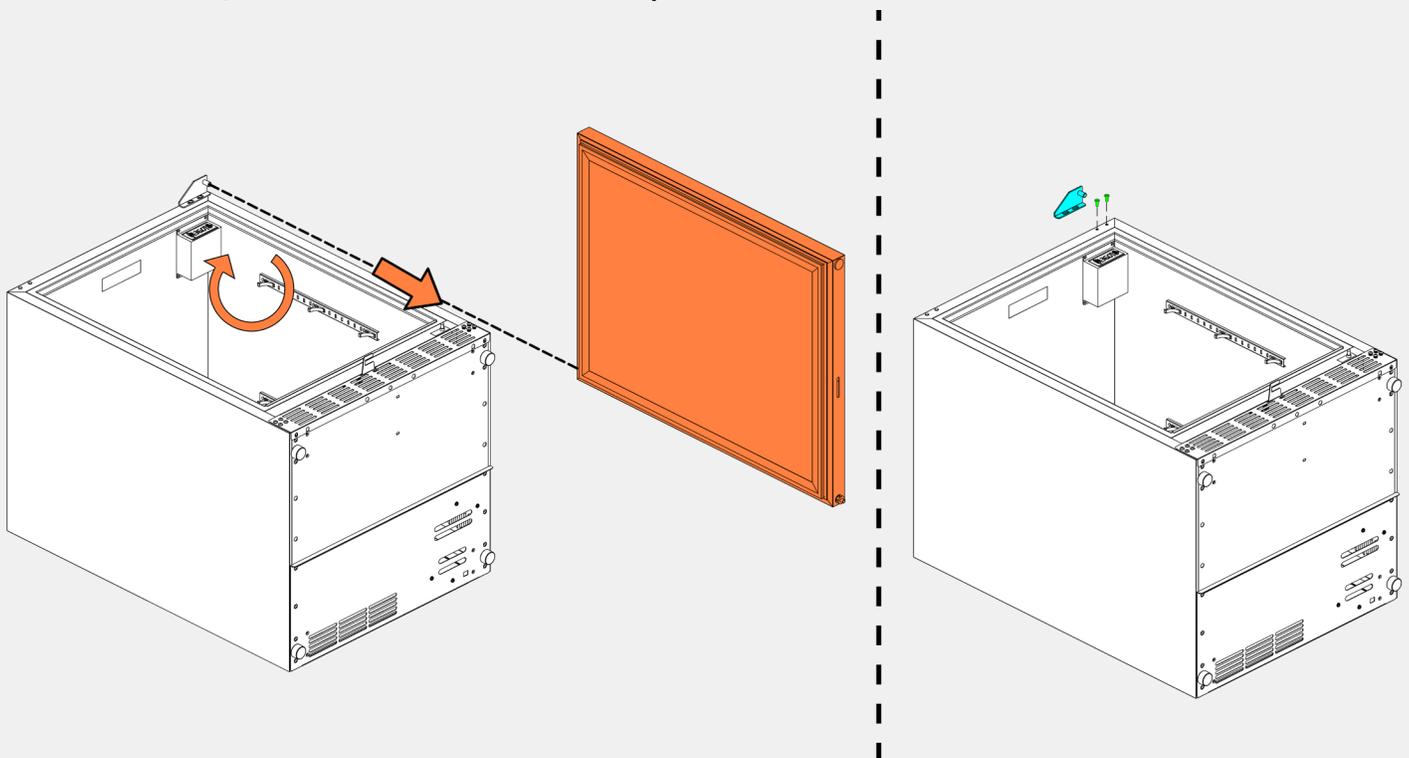


9. Remove the black caps covering the upper left holes where the new upper hinge bracket will go. Insert the removed caps in the opposite holes where the previous bracket was installed.
10. Locate the opposite-handed bracket provided with your appliance and install it into the upper left holes.


IMPORTANT: Do not use the bracket that was removed in the previous steps!

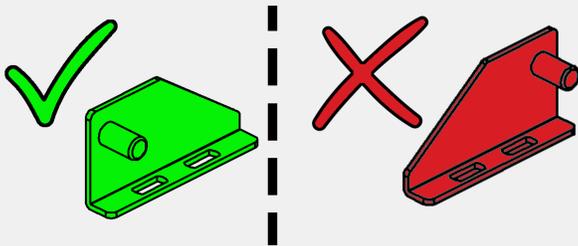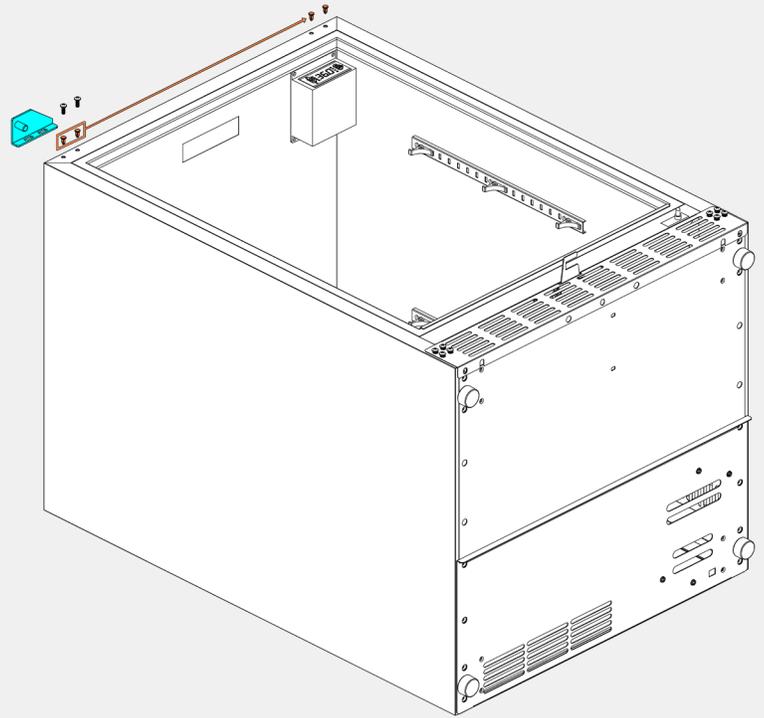


11. Remove the door hinge pin by pulling on the pin. The pin is attached to the door via a "J" rod. By pulling on the pin, the rod will come out of the bushing on the door. Slide and remove the pin from the rod. Push the "J" shaped rod back inside the door.
12. Remove the decorative caps covering the left-handed holes.
13. Install the removed caps on the opposite holes.
14. Pull out the "J" shaped rod on the left hand side of the door and slide the hinge pin onto this rod.
15. Push the "J" shaped rod back inside the door until the hinge pin is flush with the bushing on the door.

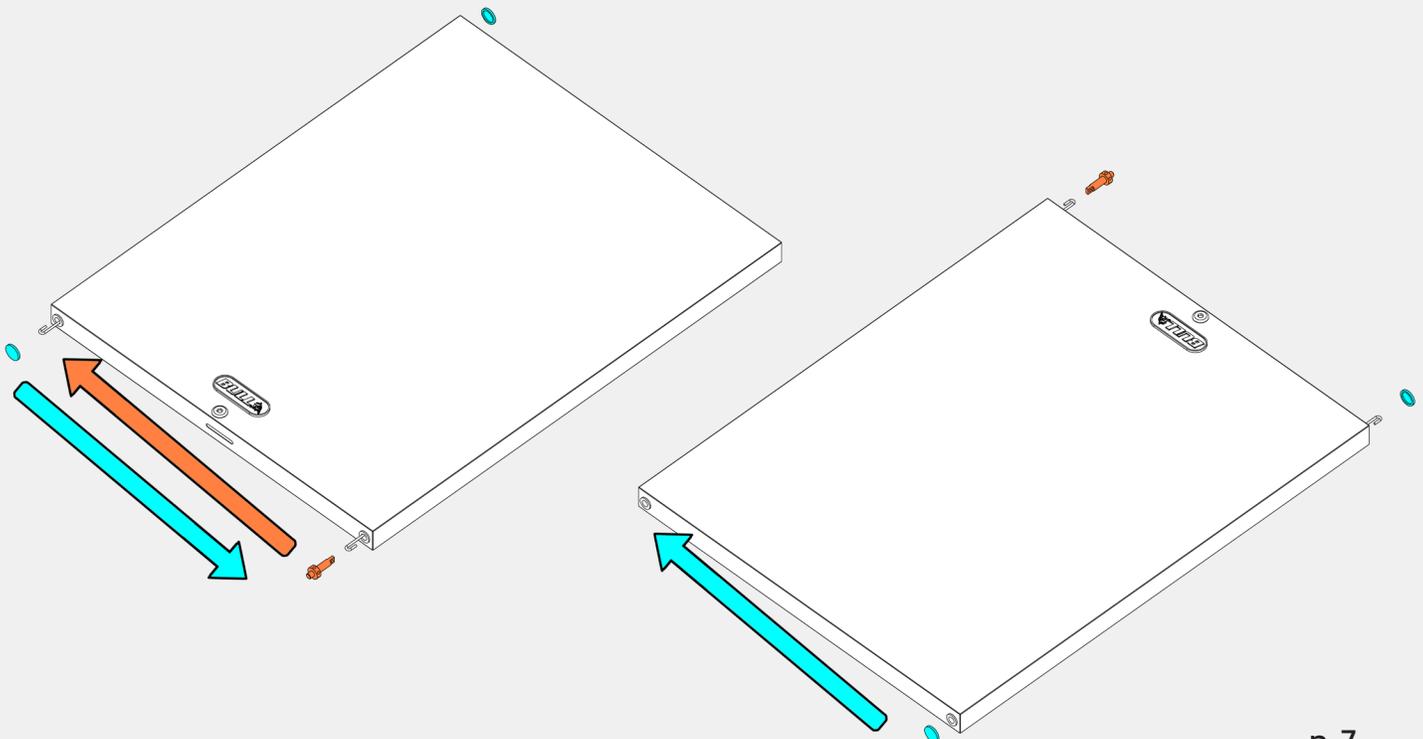



16. Hold the door as shown below and slide onto the new top hinge bracket pin.
17. Once properly seated on the top hinge, rotate the door to the closed position.

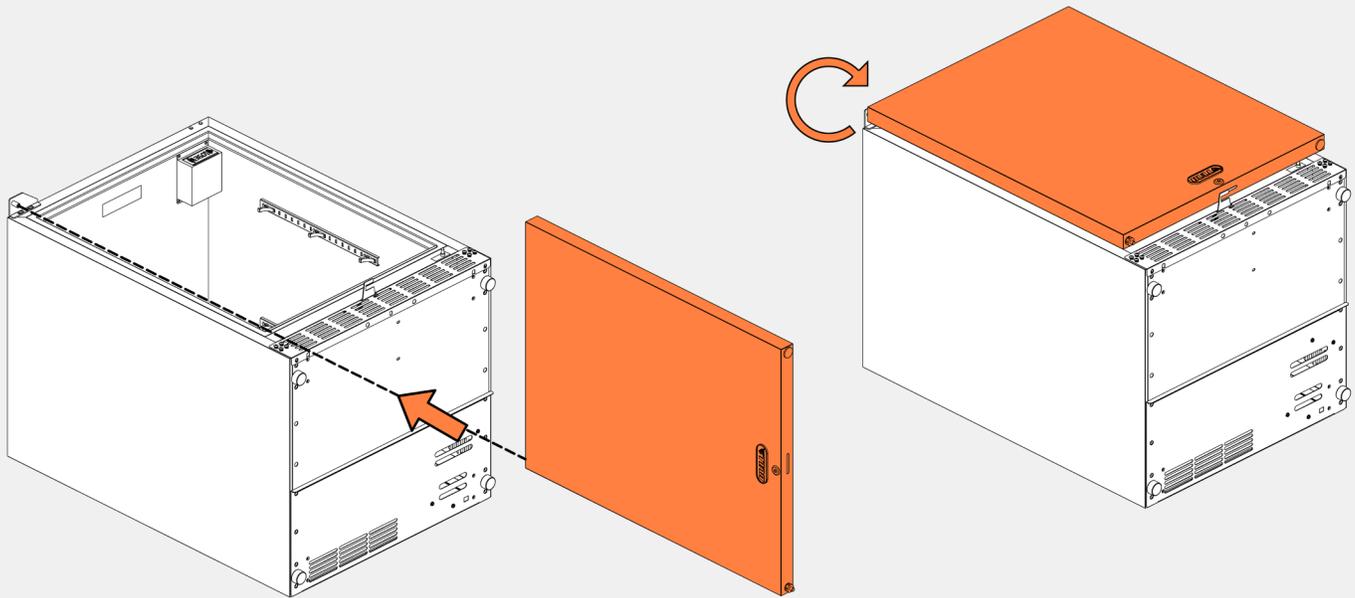


18. Prepare the installation of the bottom hinge bracket by removing the pin retention screw and installing it in the hole directly adjacent to the previous hole. Ensure the screw location matches the green highlighted bracket below before proceeding.
19. Slide the bottom hinge bracket onto the hinge pin located on the door and secure the bracket to the base of the appliance with the four Phillips head screws.

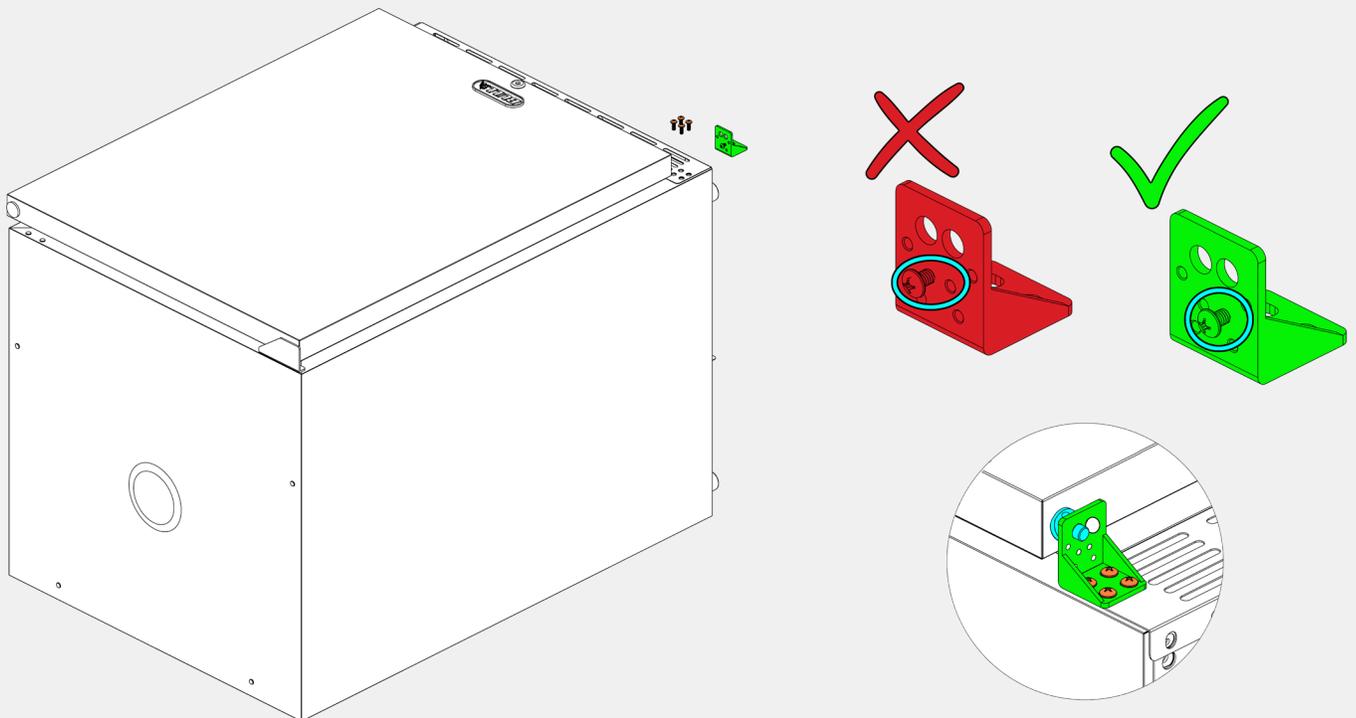


20. Insert the retaining pin into the bottom hinge pin as shown below.
21. Insert the small hex key into one of the unoccupied holes in the hinge pin and push as shown to rotate the retaining pin.
22. While holding the tension in the small hex key, use the larger hex key seat the retaining pin on the screw located on the bottom hinge bracket.
23. Hold the retaining pin on the screw with the larger hex key and slowly release the tension on the smaller hex key. Ensure that once the smaller hex key is removed that the pin is properly set on the screw

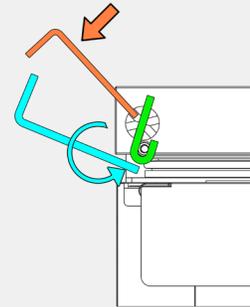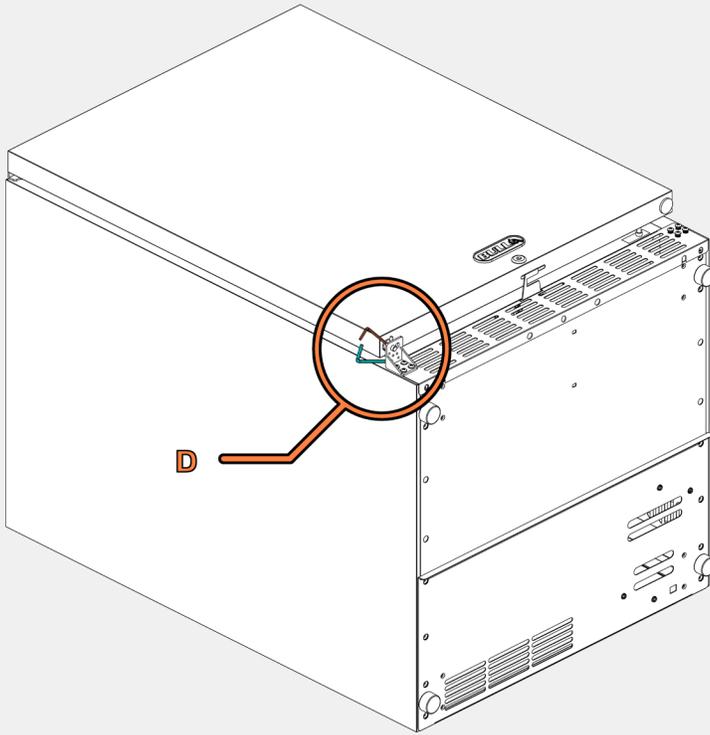

DETAIL D

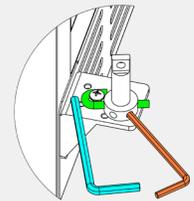


24. Carefully rotate the appliance back upright.
25. Test the swing of the door to be sure it closes on its own.
26. Replace the shelves and wait at least an hour before plugging the unit back in to the electrical source.


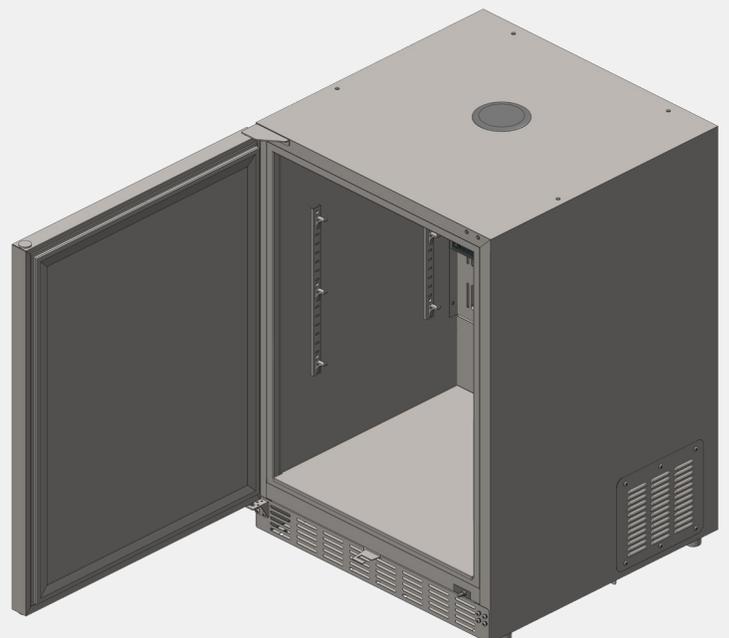


Tower Installation

- The tower is fastened to the appliance via four M6 Phillips screws.
- Lift up or remove the flange cover while securing the tower to the top of the appliance to access the mounting holes.
- Ensure that the black rubber gasket is installed between the top of the appliance and the bottom flange of the tower as shown to the right.
- Once fastened, the tower should be snug to the top of the appliance with no movement.

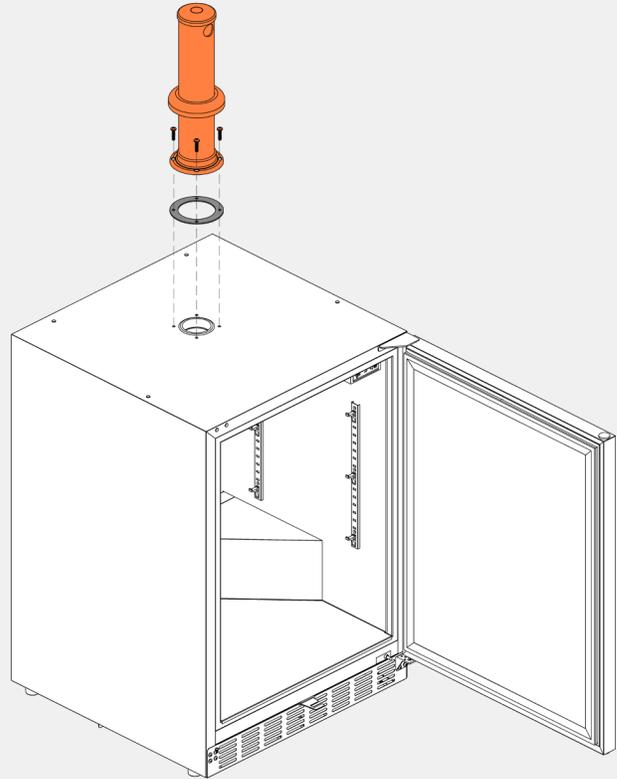


- Remove the top cap on the tower to install the beer faucet. It will be easiest to connect the clear beer tube to the faucet before securing it to the tower. Push the tube onto the barb fitting and secure it with the provided hose clamp. Feed the tube through the hole in the tower.
- Install the faucet in the order shown below. There are two circular-shaped spacers. The white spacer goes inside the tower (highlighted blue below), while the chrome spacer goes on the exterior (highlighted green below). Use the provided hex nut to secure the faucet (highlighted red below).

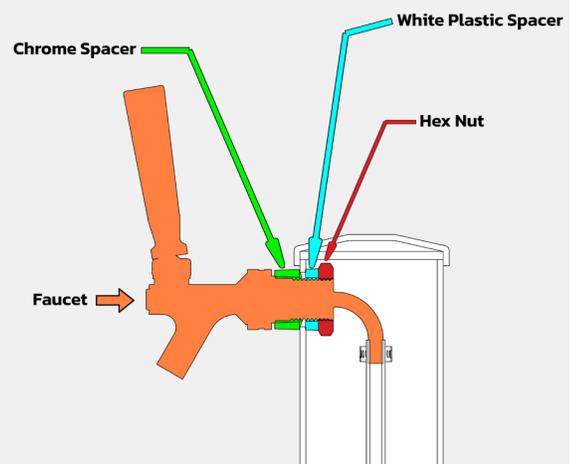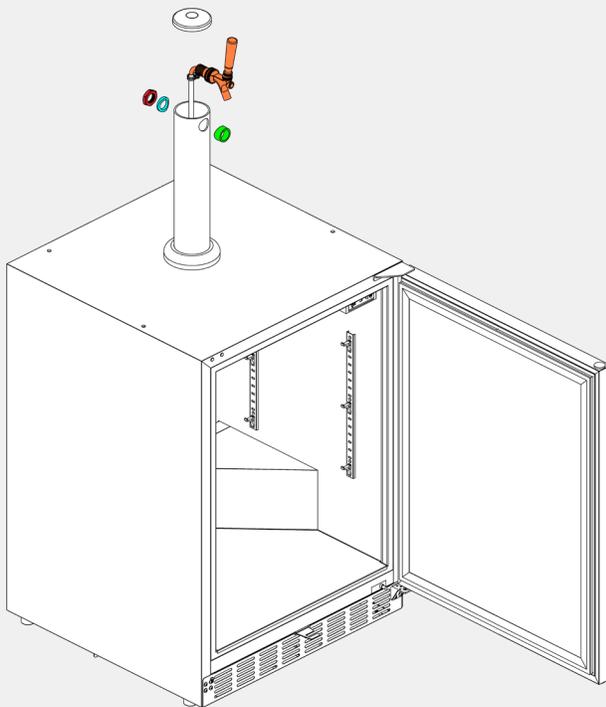

Your appliance comes with an integrated tower cooler to help keep your selected beverage cold as it travels from the container up through the tower. To install it, follow the steps outlined below:

- Open the door and locate the black corrugated hose inside the appliance. It should be found on the back wall.
- Take and route this hose up and into the tower.
- Keep feeding the hose until it has reached the top of the tower and then replace the top cap on the tower to complete the installation.

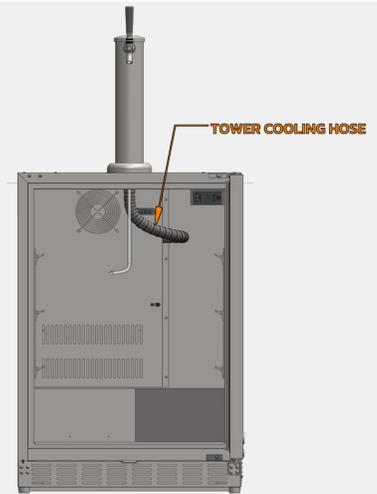


Keg Connection Details

- Connect the regulator to a filled CO₂ cylinder using the supplied spanner wrench. Take care as you tighten the regulator to ensure that the gauges remain in an upright and easy-to-read position.

IMPORTANT: Only use beverage / food grade CO₂!

- Connect the red hose to the outlet of the regulator with the provided hose clamp. The other end attaches to the inlet of the Sankey D coupler via hose clamp.
- Connect the clear hose from the tower to the outlet of the Sankey D coupler with the remaining hose clamp.
- Align and insert the lugs on the Sankey D coupler with the opening on the top of the keg.
- Rotate the Sankey D coupler clockwise until locked in place.
- Pull the black handle on the Sankey D Coupler out, and push down to set the coupler to the "ON" position.

NOTE: If you see bubbles or foam leaking from the top of the keg, this means you have not properly attached the coupler. Disconnect the coupler by pulling the handle out and up, remove it from the keg and try again.

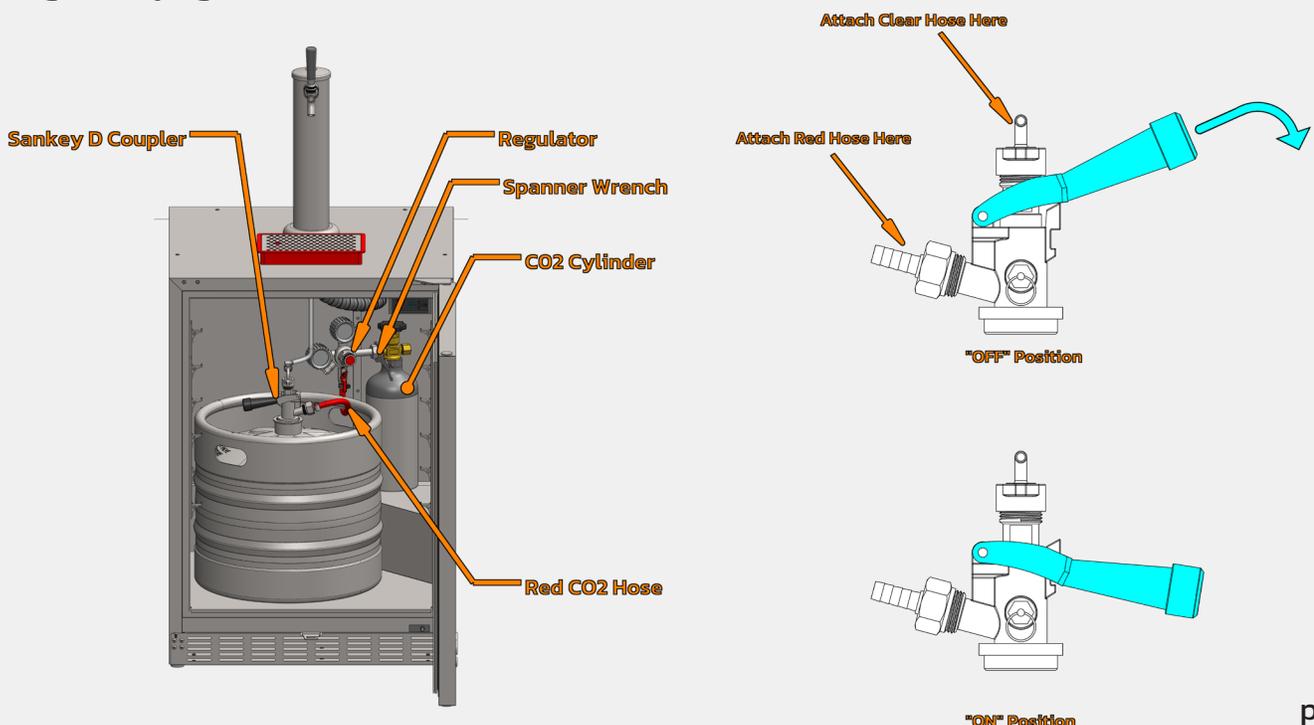

Regulator Adjustment:

- With the regulator properly attached to the supply cylinder, and the red hose is connected to both the regulator and Sankey D coupler, turn the red handle on the regulator valve to allow gas to flow to the Sankey D coupler.
- Adjust the pressure in the regulator using knob located on the front of the regulator. Aim for a pressure of 5psi on the top dial.
- Turn the knob clockwise to increase pressure, or counterclockwise to decrease the pressure. Make only small adjustments at a time and allow the system to stabilize to avoid over/under shooting your target pressure.



Leak Testing:

Leak checks should be performed whenever a new cylinder is installed. Regular, periodic checks are also recommended to ensure all components are installed properly and no gas is being wasted.

Use a solution of soap and water and apply the solution on all fittings, hoses, and connections. Any visible bubbling indicates a leak that should be rectified before further use.

Once you have verified there are no leaks in either the CO₂ or beer lines, you are now ready to dispense.

Operating Instructions

The display for your appliance's control panel is shown below along with button functions.


UP Arrow Button

Press to Increase Temperature Setting

Press and Hold to Perform Manual Defrosting

POWER Button

Press and Hold for 5 Seconds to turn On/OFF

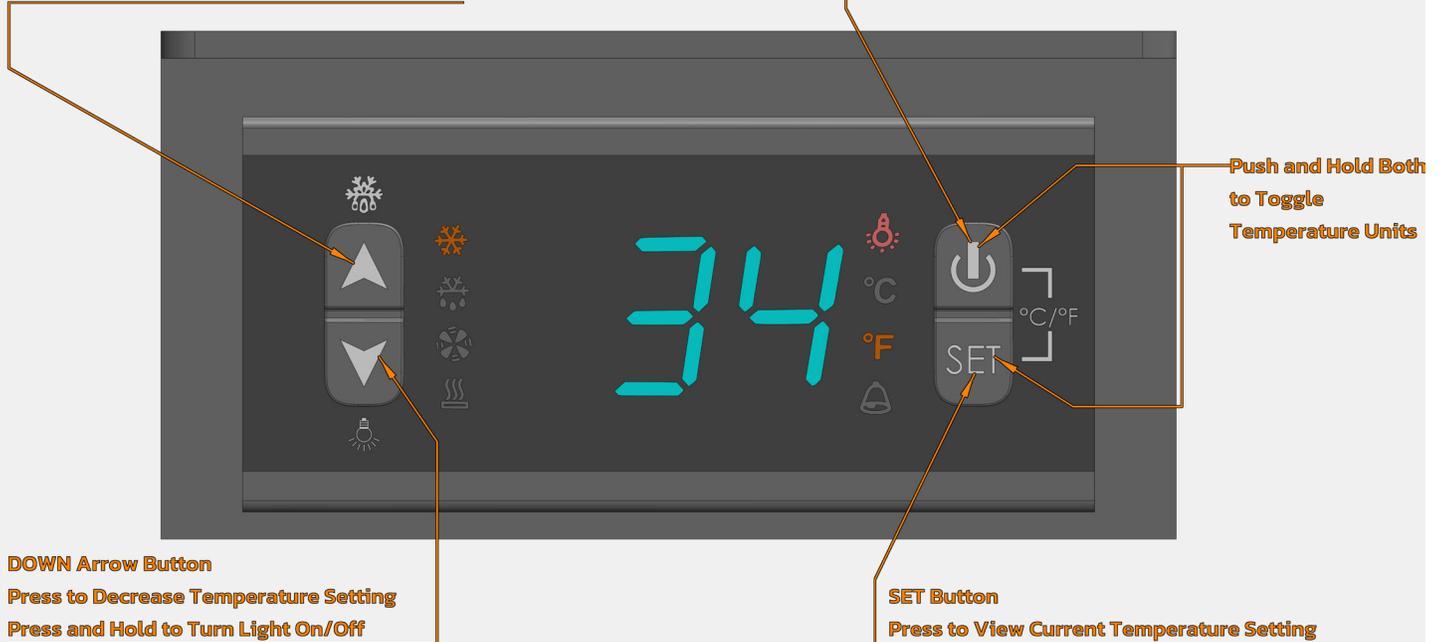

Interior Light:

The appliance is equipped with an interior LED light that turns ON when the door is open. Opening the door automatically shuts off the interior fan at the same time. You can press and hold the button with down arrow symbol on the control panel to manually turn the light off or on.

Defrosting:

The unit defrosts automatically in normal operating conditions. The evaporator behind the rear wall of the unit defrosts automatically. The resulting condensation is collected in the drainage channel behind the rear wall of the unit and flows through the drainage hole into the drip tray by the compressor where it evaporates.

IMPORTANT: if the door is opened in a high heat or high humidity location it may cause frost to accumulate on the evaporator. If the frost pattern does not clear within 24 hours, your unit will require manual defrosting.

To initiate a manual defrosting cycle, press and hold the up arrow button for six seconds. Once defrosting is complete, press and hold the same button again for six seconds to turn off defrost mode.

Temperature / Door Alarm:

An alarm will sound if the storage temperature is not cold enough and the display will flash at the same time. If the door is left open for more than 60 seconds, an audible alarm will sound. Pressing any button once will turn off the alarm.

Door Lock:

The door of your unit has a lock and key provided. These should be in the plastic bag containing the owner's manual. To lock the door, insert the key in the door's lock (make sure the pin for the lock is engaged) and turn it clockwise. Turn the key counter clockwise to unlock the door. When not in use store the key in a secure location for safe keeping.

Cleaning and Maintenance

1. Turn off the appliance. Unplug the power cord and remove all items including the shelves.
2. Wash the inside surfaces with a solution of warm water and baking soda (about 2 tablespoons of baking soda per 1 gallon of water).
3. Wash the shelves with a mild detergent solution.
4. Wring out excess water from sponge or cleaning cloth before cleaning around control panel display, or electrical parts.
5. Wash the outside of the unit with a solution of warm water and mild detergent. Rinse well and dry with a clean, soft cloth towel.
6. When cleaning the outside of the unit be sure to use cleansers that are designated for stainless steel. Do not use steel wool scrubbing pads or a wire brush.

Power Failure:

Your refrigerator will maintain its temperature for a few hours if the door is kept closed in the event of a power failure. If the power failure continues, you will need to remove the contents that are at risk.

Vacation Periods (or prolonged periods of non-use):

Short Vacations (Less than 3 weeks): leave the unit on.

Long Vacations (Longer than 3 weeks): Remove the contents, unplug the unit and follow the cleaning instructions for interior and exterior.

Note: Odors or Mold growth can be avoided by blocking the door from fully closing, but with care not to harm the door gasket.

Moving the Appliance:

1. Remove all items.
2. Remove the shelves or use tape to secure them in place.
3. Turn the adjustable feet clockwise until they are all the way in to avoid damaging them.
4. Tape the door shut.
5. Use moving blankets or equivalent to protect the outside while moving.
6. Always keep the unit in the upright position, never place on its side or upside down.

Energy Saving Tips:

- The appliance should be located in the coolest area of the room or outdoor location, away from heat producing appliance and out of direct sunlight.
- Ensure the unit is adequately ventilated. Never cover air vents.
- Do not keep the door open any longer than necessary.
- Let hot foods cool to room temperature before placing in the unit. Overloading the unit forces the compressor to run longer.
- Be sure to wrap foods properly, and wipe containers dry before placing them in unit. This cuts down on frost build up inside the unit.
- Unit shelves and storage bins should not be lined with aluminum foil, wax paper or paper towels. These liners interfere with air circulation resulting in less operating efficiency.
- Organize and label stored items to reduce door opening or extended searching for items.
- Remove as many items as needed while avoiding opening door repeatedly. Always close door as soon as possible.

Appliance Disposal:

Before disposing of the appliance, disconnect the unit from the electrical source. With the appliance disconnected from the power source, cut off the main cable and discard it.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safety.



This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

Helpful Tips

IMPORTANT: Your Bull Kegerator comes with a Sankey D Keg coupler. Check with your retailer when purchasing your keg to be sure that it is compatible with the Sankey D coupler.

- Your keg should be between 35°F and 38°F at the time of purchase.
- When transporting the keg, you may want to put it on ice or wrap it in a blanket to preserve cool temperature.
- Getting your newly purchased keg to your kegerator as quickly as possible will help prevent an increase in keg temperature.
- Allow the keg to settle in kegerator for at least 1 hour before pouring. Doing so will help reduce foaming.
- Keep the interior temperature of the kegerator between 35°F and 38°F for best results.
- The flow valve on the faucet should remain in the downward position (all the way open) at all times. Closing the flow valve or restricting flow can cause unnecessary foam. – The flow valve is the small chrome valve on the right side of the faucet.
- It is common to experience foaming with newly tapped kegs.
- Where to fill your CO2 Cylinder?
 - ◇ Welding Supply Stores and home brewery shops typically offer refill or exchange services. It is always best to call ahead to make sure that they can accommodate your needs.
- Regulator outlet setting:
 - ◇ There are many discrepancies in what your PSI should be set to based on the different types of beers. YouTube and other online resources have a wealth of information. Feel free to experiment!

IMPORTANT: Only use beverage / food grade CO₂!

Troubleshooting

If you've checked the table below and find that you still need help with your appliance call our Customer Service Facility at 1800-521-2855 or <https://bullbbq.com/contact/> We will do our best to answer your questions.

Problem	Possible Cause	Remedy
Appliance does not operate	<ol style="list-style-type: none"> The appliance is turned off. The appliance is not connected to a power supply. Tripped circuit breaker or blown fuse. 	<ol style="list-style-type: none"> Turn on the appliance. Connect the appliance. Reset breaker or replace fuse.
Appliance is not cold enough	<ol style="list-style-type: none"> The temperature not set correctly. The ambient temperature could require a lower setting. The door was opened too often. The door was not completely closed. Door is not hermetically sealed. The condenser is too dirty. The ventilation opening is blocked or dusty. 	<ol style="list-style-type: none"> Check the set temperature. Change the setting to a lower temperature. Close the door properly. Check the door seal and clean or replace. Clean the condenser as necessary. Clear the obstructions and dust.
Appliance turns itself on or off frequently	<ol style="list-style-type: none"> The ambient temperature is higher than average. A large amount of food has been added to the unit. The door is open too often. The door is not closed completely. The door gasket does not seal properly. 	<ol style="list-style-type: none"> Locate the appliance in a colder location. Leave the appliance closed until the set temperature has been reached. Do not open the door more than necessary. Close the door properly. Check the door seal and clean or replace.
The interior light does not work	<ol style="list-style-type: none"> The light was switched off on the control panel. The appliance is not connected to a power supply. Tripped circuit breaker or blown fuse. 	<ol style="list-style-type: none"> Switch on the light. Connect the appliance. Reset the circuit breaker or replace fuse.
Excessive Vibration	<ol style="list-style-type: none"> The appliance is not properly leveled. 	<ol style="list-style-type: none"> Level the appliance with the adjustable feet.
The appliance seems to make too much noise*	<ol style="list-style-type: none"> The appliance is not properly leveled. 	<ol style="list-style-type: none"> Level the appliance with the adjustable feet.
The door will not close	<ol style="list-style-type: none"> The appliance is not properly leveled. The door was reversed and not properly installed. The door gasket is dirty. The shelves are out of position. 	<ol style="list-style-type: none"> Level the appliance with the adjustable feet. Check the door hinge and reassemble correctly. Clean the door gasket. Check the shelves and install correctly.
The alarm sounds and the temperature display flashes	<ol style="list-style-type: none"> Door has been open longer than 60 seconds. The appliance door being opened too often. The ventilation openings are covered or too dirty. A lengthy interruption in the power supply. A large amount of food has been added to the unit. 	<ol style="list-style-type: none"> Properly close the door. Do not open the door more than necessary. Clear the obstructions and clean the dust. Leave the appliance to work for a while until the set temperature is reached. Leave the appliance to work for a while until the set temperature is reached.

* A rattling noise may come from the flow of refrigerant. This is normal and no cause for alarm. As the cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in the appliance. If temperature fluctuations occur, the contraction and expansion of the inner walls which may cause popping and cracking noises.

Product Warranty and Registration

Thank you for choosing Bull Outdoor Products. To enable our commitment to your satisfaction, you will need to register your purchase for it to be covered under Bull's warranty policy. Please save your purchase receipt as it is required for warranty claims. Additionally, registering your purchase will allow Bull or your Bull Authorized Dealer to utilize the encoded information for the purpose of ordering replacement parts or additional accessories to ensure your purchase remains in optimal working condition. To validate your warranty, we offer two options as shown below:

Option 1: Online Registration

 Registration can be completed on the Bull Customer Service Portal

 Scan the QR code, or visit: <https://api.bullbbq.com/c/>

Option 2: Mail-in Registration

Complete the Product Warranty Registration Card located in the shipping box. A reference of the card is shown to the right.

Mail the completed card to:

BULL OUTDOOR PRODUCTS, INC.
15 East Ave, Athens, TN
Attn: Warranty Service Center



Bull Outdoor Products Warranty Registration Card **BULL**

Name _____ Date of Purchase _____

Place of Purchase _____ Phone _____

Email Address _____ Apt # _____

Street Address _____

City _____ State _____ Zip Code _____

How To Register
On Our Website: Bullbbq.ladesk.com/submit_ticket
Via Mail: Fill out this form and mail it to us!

Model Name: _____
Model Number: _____
Serial Number: _____

Scan This Code With Your Phone 

Unpacking the Refrigerator:

After opening the box, carefully inspect the contents for any damage. Contact our service center or local dealer for replacement of any damaged/missing parts. If damaged, do not attempt to install.

Ordering Replacement Parts:


Please refer to your owner's manual parts list and illustration(s) to identify what you need. Have your serial number ready. Replacement parts can be purchased via two options.

Option 1: Online

 Scan the QR code, or visit:
<https://bullbbq.com/buy-parts>

Option 2: Phone


We have two authorized parts distributors ready to assist.

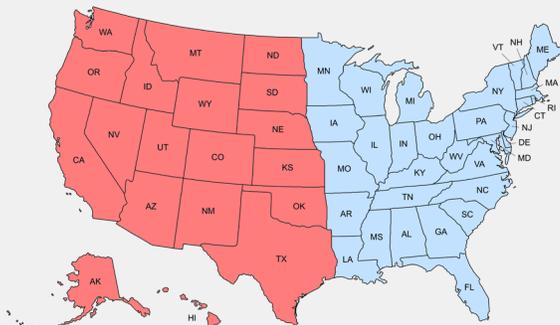

Western Region
(800) 258-6810


Eastern Region
(800) 229-3056

Serial Number Locations:

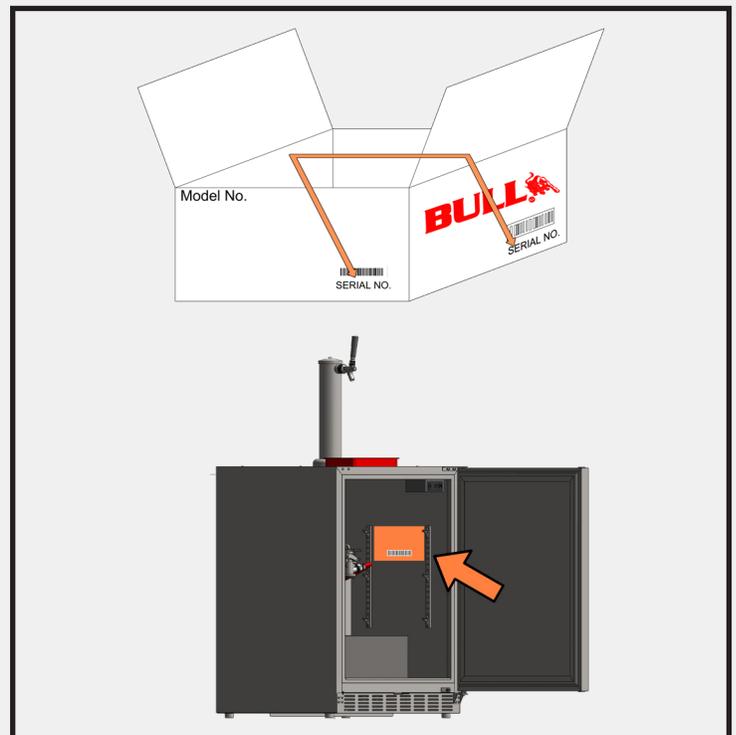

Replacement Parts List

ITEM NUMBER	BULL SKU#	DESCRIPTION	QTY
1	17901	REAR COVER	1
2	17902	COMPRESSOR COVER	1
3	17903	DOOR	1
4	17904	BOTTOM VENT	1
5	13507	ADJUSTABLE FEET	4
6	17905	TOP DOOR HINGE - RH	1
7	17906	TOP DOOR HINGE - LH	1
8	17907	BOTTOM DOOR HINGE	1
9	17958	BEER TOWER	1
10	17910	BEER FAUCET	1
11	13706	SHELF RAIL	4
12	13704	SHELF BRACKET	12
13	13707	WIRE SHELF	3
14	17919	CAP	1
15	17931	BEER CATCH TRAY	1
16	17930	BEER CATCH SCREEN	1
17	17912	SANKEY D KEG COUPLER	1
18	17914	CO2 REGULATOR	1
19	17915	CO2 CYLINDER	1
20	17932	SPANNER WRENCH	1
21	17927	1/4" BEER TUBE - CLEAR	1
22	17928	5/16" CO2 TUBE - RED	1
23	17916	HOSE CLAMP	2

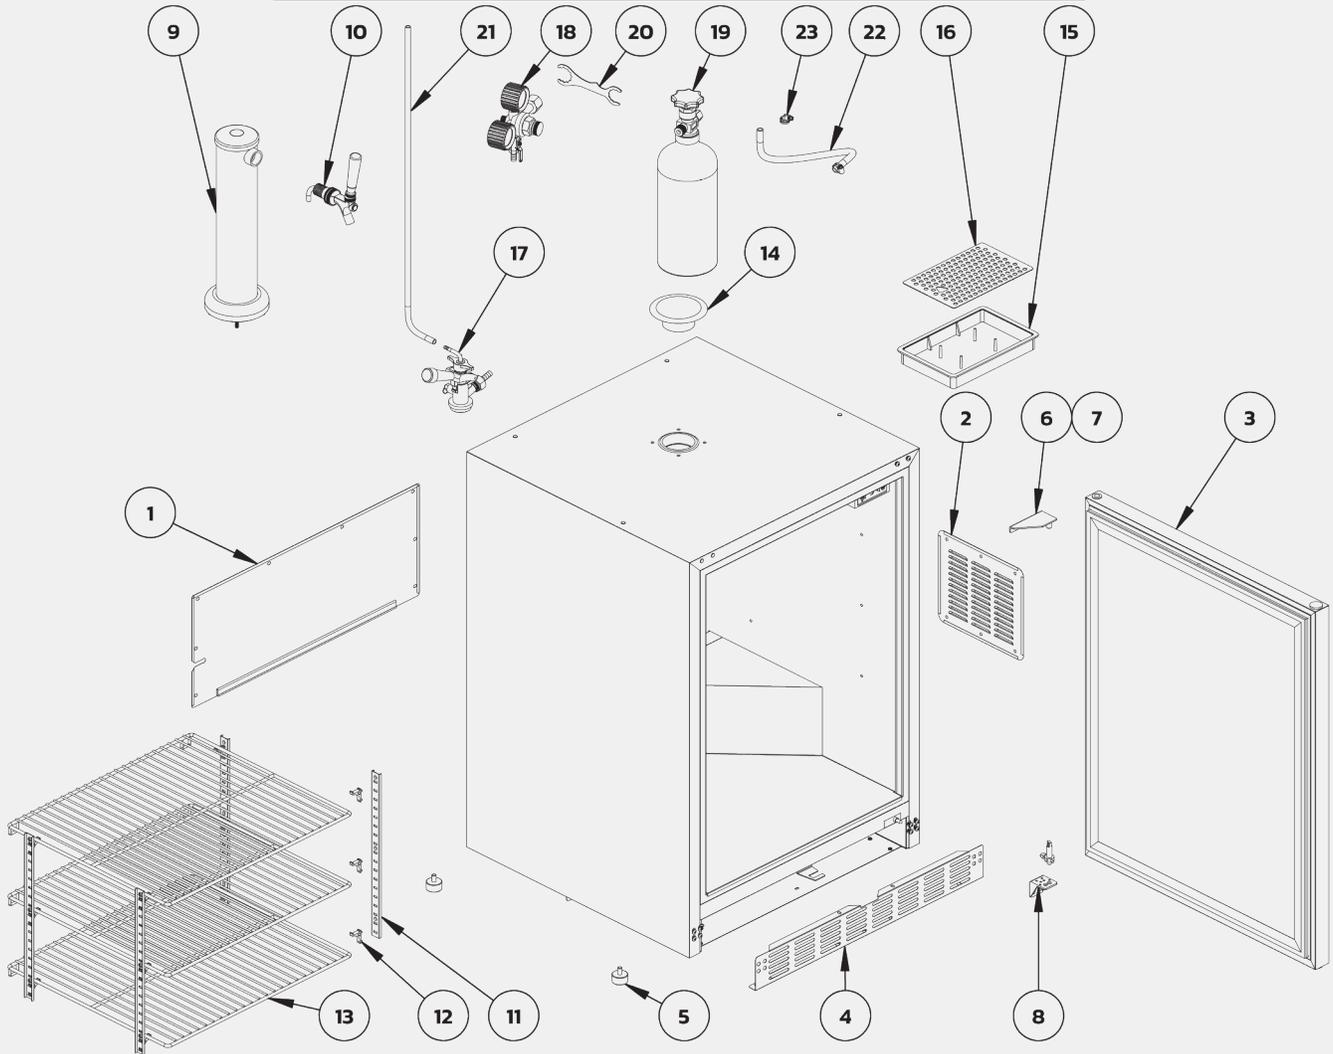

WARNING: Use of any part that is not factory authorized will void your warranty and may be dangerous.

Warranty Policy

LIMITED WARRANTY ON BULL OUTDOOR PRODUCTS, INC., PRODUCTS

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

THIS LIMITED WARRANTY CAN ALSO BE FOUND ON OUR WEBSITE AT:

<https://www.bullbbq.com/support-warranty> (United States Customers)

<https://www.bullbbq.eu/customer-care/#warranty-registration-form> (International Customers)

AND IN THE OWNER'S/INSTALLATION MANUALS THAT WE PROVIDE WITH OUR PRODUCT

THIS LIMITED WARRANTY IS SUBJECT TO THE EXCLUSIONS, CONDITIONS AND LIMITATIONS SET FORTH BELOW.

ANY IMPLIED WARRANTIES IMPOSED BY LAW, INCLUDING WITHOUT LIMITATION TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESSED LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

WHO MAY USE THIS WARRANTY?

BULL OUTDOOR PRODUCTS, INC. located at address 15 East Ave. Athens, TN 37303

("We") extend this limited warranty only to the consumer who originally purchased the product ("you") at the original site of delivery or installation. It does not extend to any subsequent owner or other transferee of the product. It does not extend to any rental, commercial, or non-residential application. Examples of excluded applications include, but are not limited to day care centers, schools, bed and breakfast centers, churches, private clubs, fire stations, club houses, Common areas in multi-family dwellings, restaurants, hotels, nursing homes, food service locations, and institutional food service locations.

WHAT DOES THIS WARRANTY COVER?

This limited warranty covers defects in materials and workmanship of the product and product components identified below for the Warranty Periods defined below.

WHAT IS THE PERIOD OF COVERAGE?

This limited warranty starts on the date of your purchase and lasts for the time periods specified on the next page. The Warranty Period is not extended if we replace the product. We may change the availability of this warranty at our discretion, but any changes will not be retroactive.

Warranty Policy (Continued)

Grilling/Pizza Accessories and Grill Covers DO NOT include a warranty period

Grill Warranty Periods

The following parts are covered for **1 year** on all our current gas grill models:

- The lid, control panel, grease tray, bezels, knobs, temperature gauge, valves, regulator, flex tubes, rotisserie burner, transformer, and all components of the lighting system.

The following parts are covered for **3 years** on all our current gas grill models:

- The manifold, handle end caps, flame tamers, heat shields, and warming rack.

The following parts are covered for the **Lifetime** on all our current gas grill models:

- Insert assembly and the grates.

The warranty period for the grill burners varies by type:

- Cast stainless steel burners – **Lifetime**
- Welded stainless steel burners – **5 years**
- Porcelain coated burners – **3 years**

The warranty period for the charcoal grill is **1 year** on all parts, except for the insert assembly, which is covered for **5 years**.

Component Warranty Periods

All the parts for our components /grill carts/refrigerators/kegerators/drawers/doors/refrigerator frames/grill

jackets/finishing frames/ice chest/sinks/bar center and vent hoods are covered for **1 year** with these exceptions:

• Power Burner

- o The insert/grates are **lifetime** covered parts.
- o The manifold/burner are covered for **3 years**.

• Searing Station/Slide in Double Sideburner

- o The grates are covered for **lifetime**,
- o The insert for **5 years**, and
- o The manifold for **3 years**.

• Single Sideburner

- o The grates are covered for **5 years** and
- o The burner for **3 years**.

• Sidekick

- o The burner is covered for **3 years**.

• Heaters

- o The heater replacement parts are covered for **3 years**.

• Pizza Ovens/Islands/Fire Features Warranty Periods

- o All of the parts and construction materials are covered for **1 year**.

Warranty Policy (Continued)

WHAT DOES THIS WARRANTY NOT COVER?

This limited warranty does not cover any damage due to:

- Transportation.
- Storage
- Improper installation or use.
- Use on improper fuel/gas supply.
- Failure to follow the product instructions or to perform any preventive maintenance.
- Modifications.
- Normal wear and tear, rust, corrosion, oxidation, or discoloration.
- External causes such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT OPTIONS ARE OFFERED BY BULL OUTDOOR PRODUCTS UNDER THIS WARRANTY?

With respect to any defective product claim made during the Warranty Period, we will, in our sole discretion:

- Replace such product (or the defective part) free of charge.

WHAT IS EXCLUDED BY BULL OUTDOOR PRODUCTS UNDER THIS WARRANTY?

- We will not pay for shipping charges for replacement parts, or for any labor or labor related charges.
- We will not pay for any accessory products or ancillary products purchased by you for use in connection with the product.

HOW DO YOU NOTIFY BULL CUSTOMER SERVICE OF A POTENTIAL WARRANTY ISSUE?

Our Customer Service is ready to help. Here's how to reach us:



By Phone (800) 521-2855 Monday through Friday from 8:00 a.m. to 5:00 p.m. (EDT)



To submit a warranty, claim on-line or message go to <https://www.bullbbq.com/support-warranty.com>

LIMITATION OF LIABILITY

THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

v2025.02.14